

DENTA-PRIDE SmartGuide

ブラウン オーラルB デンタプライド スマートガイド

with Wireless Smart Guide



で使用前に必ずお読みのうえ、正 巻末に保証書が添付されておりま




2分で分かる! 簡単・使い方ガイド

詳しくは説明書をご覧ください。

▶ご使用前に

- ・初めて使う際、お急ぎの場合は、1時間程度充電すれば 約2分間ブラッシングが可能です。
- ・フル充電には約24時間必要です。
- ・充電後、本体にブラシを差し込んで、On/Off スイッチを 押すと動き始めます。

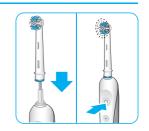

磨く前に

- ・歯磨き粉は、米粒大程度のごく少量で充分です。
- ・歯磨き粉が飛び散らないよう、お口の中でスイッチを入 れ、お口から出す前にスイッチを切ってください。
 - ※正しい磨き方に関しては、次ページをご覧ください。



▶お手入れ方法

- ・ブラッシング後、ブラシを本体につけたまま下向きにし て、流水でブラシをよくすすぎます。
- ・その後、本体からブラシを取り外し、流水で洗います。本 体の水気をよく拭き取ってください。
- 防滴加工が施されていますので、本体が水に濡れても心。 配ありません。




▶ブラシ交換について

- ・ブラシの青い毛先が白くなったら、ブラシの交換時期で す。交換の目安は約3ヵ月です。
- ・ブラシを替えれば、同じ歯ブラシ本体をご家族でご利用 いただけます。



・インターネットでもお買い求めいただけます。

購入サイトへは ブラウン 替えブラシ



2分で磨ける! 正しいブラッシング早わかり。

~ 正しく磨けば、効果最大!~



(1)お口の中を4分割して均等に磨きます。

使い始めは、振動がくすぐったかったり、激しく感じたりすることがありますが、徐々に慣れてきます。 もちろん歯ぐきにもやさしく、身体への影響もありません。

2 ブラシは歯に軽く当て、歯の一本一本を 意識して、外側・内側・上面をそれぞれ 10秒ずつなぞりましょう。

> 手磨きのように小刻みに手を動かさないのが コツ。ブラシは、力を入れすぎないように 「歯に軽く当ててなぞるだけ」です。





3 側面を磨く際、ブラシは左図のように歯に対して 斜め45度に当てると、歯と歯ぐきの間の歯垢が 効果的に除去できます。

前歯の内側を磨くときは、ブラシを立てて使用すると効果的です。





4 上記の30秒ブラッシングを4箇所分、 繰り返してください。


磨いた後、舌の先で歯の表面をなぞると、 ツルツルになっているはず。 さらに指でこすってみるとキュッキュとなるほど 歯垢がすっきり落ちています。






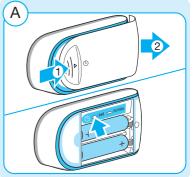

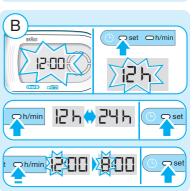

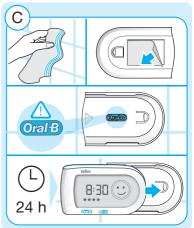

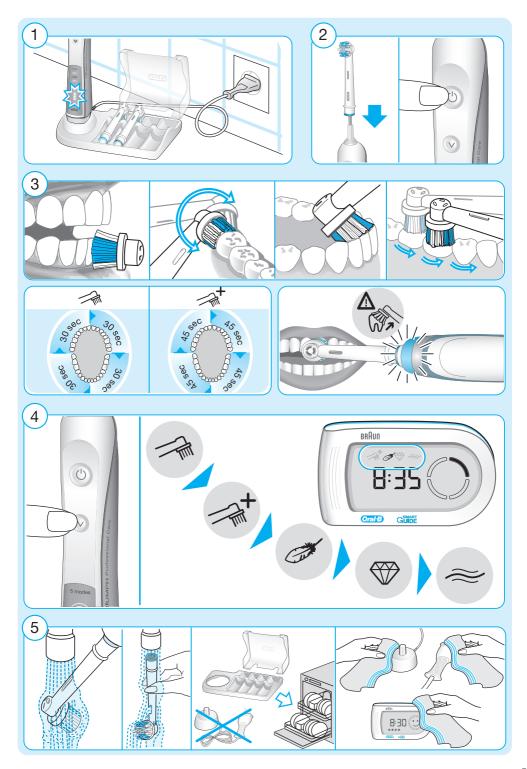

ブラウン オーラルB デンタプライド スマートガイドは、 お客様に安全で効果的な全く新しい歯磨きを体験して頂 けるよう細心の注意をもって作られていますが、ご使用に あたっては安全に関する注意事項をよくご確認のうえ、 正しくお使いください。

安全上のご注意

- ●ご使用の前に、この「安全上のご注意」をよくお読 みのうえ、正しくお使い下さい。
- ●ここに示した注意事項は、製品を安全に正しくお 使い頂き、あなたや他の人々への危害や損害を 未然に防止するためのものです。また、注意事項 は、危険の度合いを明示するために、次のように 区分しています。

いずれも安全に関する重要な内容ですので、 必ず守ってください。

♠ 警告: 人が死亡又は重傷を負う可能性

が想定される内容。

/ 注意: 人が傷害を負う可能性及び物的損 害の発生が想定される内容。

お読みになった後は、お使いになる方が いつでも見られるところに必ず保管してください。

■絵表示の例



↑ 記号は、警告・注意を促す内容があるこ とを告げるものです。図中に具体的な注 意内容(左図の場合は感電注意)が描か れています。



○記号は、禁止行為であることを告げる ものです。図中や近傍に具体的な禁 止内容(左図の場合は分解禁止)が描 かれています。



記号は、行為を強制したり指示したり する内容を告げるものです。図中に具 体的な指示内容(左叉の場合は雷源 プラグをコンセントから抜く)が描か れています。

告

●交流100V以外では使用しない。 火災·感電の原因となります。



●電源コードを傷付けたり、無理に曲げたり、 引っ張ったり、ねじったり、たばねたり、高温 部に近づけたり、重い物を載せたり、挟み込 んだり、加工したりしない。

電源コードが破損し、火災・感電の原因とな ります。

●電源コードや電源プラグが傷んだり、コン セントの差込みが緩いときは使用しない。 感電・ショート・発火の原因になります。



●改造はしない。また修理技術者以外は、分 解・修理をしない(製品の廃棄の際に充電 池を取り出すときを除く)。

火災・感電・けがの原因となります。修理はお 買い上げの販売店又はブラウンリペアセン ターにご相談下さい。



●電源プラグや充電器を水につけたり、水を かけたりしない。また、水中に落下するよ うなおそれのある位置に設置しない。 ショート·感雷·発煙·発火·漏雷火災等や故障

のおそれがあります。



●電源プラグや充電器を浴室、シャワー室 のような湿気の多い場所では使用しない。 ショート·感雷·発煙·発火·漏雷火災等や故障 のおそれがあります。



●濡れた手で電源プラグをコンセントから抜 き差ししない。 感電やけがをすることがあります。



●お手入れの際は必ずスイッチを切り、電源 プラグをコンセントから抜く。また、充電器 を水中に落とした場合も、水中の充電器に 触れず、すぐに電源プラグを抜く。 感電やけがをすることがあります。



●異常・故障時には、直ちに使用を中止する。 そのまま使用すると火災・感雷・けが・故障に至 るおそれがあります。直ちにスイッチを切り、 電源プラグや乾電池を抜いて、ブラウンリペ アセンターへ点検・修理を依頼してください。

●電源プラグ使用の際は、必ず電極部の水を 完全に拭き取る。

ショート・感雷・発煙・発火・漏雷火災等や故障 のおそれがあります。

/ 注 意

●子どもだけで使わせたり、子どもの手の届 くところに置かない。

事故やけがのおそれがあります。子どもや 介助が必要な方が使用する際は、必ず保護 者や責任者の監督下でお使いください。

- ●3歳未満の子供に使用しない。
- ●歯みがき以外の目的には使用しない。 製品の消耗を早め、事故の原因になります。



●電源プラグに金属、ほこり、水滴等を付着さ せない。

ショート・感電・発煙・発火・漏電火災等や故障のお それがありますので定期的に掃除してください。

●歯ぐきにブラシやノズルを強く当てすぎな U)

歯ぐきを傷める事があります。歯槽膿漏の ひどい人などは歯科医にご相談ください。

●廃棄時に充電池を取り出す際は⊕⊖端子 をショートさせない。

⚠ 注 意

- ●ご使用の前にブラシやノズルにガタツキや 変形がないか確認する。
 - 歯ぐきや口唇を傷つけることがあります。
- ●製品を落としたりした場合、外見上破損が 見られなくても、ブラシやノズルを交換する。

歯みがき中に破損して口腔内にケガをする おそれがあります。



- ●歯科治療中、または義歯を使用している場合は、使用の前に歯科医に相談する。
- ●本体・充電器の開口部にものを差し込まない。
- ●ブラウン推奨品以外の充電器や付属品は 使用しない。
- ●電源プラグを抜くときは、電源コードを持たずに必ず先端の電源プラグを持って引き抜く。

感電やショートして発火し、火災に至ること があります。

●本製品は「屋内用」です。



●充電器使用時以外は、電源プラグをコンセントから抜く (長期不在の場合等は特に注意)。

けがや火傷、絶縁劣化による感電や漏電火 災の原因になります。

子供が本製品を遊びに使わないよう、お気をつけください。

初めてお使いになる前に

オーラルBデンタプライド5000は対話型無線ディスプレイを使用しています。

● 電磁干渉および電磁環境両立性の問題を避けるために、航空機または病院内の指定された場所への持ち込みや使用の場合には、本機の無線機能をオフにする。

無線機能をオフにする

- ▶ On/Offスイッチとブラッシングモード切替スイッチを 同時に3秒間、無線交信表示むが消えるまで押し、無線 機能をオフにすることができます。同じ方法で、無線機 能をオンすることができます。
- ペースメーカーのような医療機器をご使用の方は、 基本的に、本機の無線機能をオフにしてご使用ください。オンにして使用される場合は少なくともペース メーカーから15センチ以上離して頂き、異常が感じられる場合は直ちに無線機能をオフにしてください。 (「無線機能をオフにする」を参照)

仕様

- **a**ブラシ
- b押しつけ防止ライト
- COn/Offスイッチ
- ₫ブラッシングモード切替スイッチ
- €本体
- 無線機能表示
- ❸充電マーク
- ☆電ユニット (充電器、カバー付きブラシホルダー)
- ①スマートガイド
- ●壁掛けホルダー
- ■両面テープ

	振動数(最大値スと	ピ ー ドの場合)	
		上下振動	左右反転振動
	クリーン	約40,000回/分	約8,800回/分
振 動	しっかりクリーン	約40,000回/分	約8,800回/分
1111	やわらかクリーン	約30,000回/分	約6,500回/分
	ホワイトニング	約20,000~ 40,000回/分	約4,400~ 8,800回/分
		約2,640~ 8,800回/分	
電源方式	充電式		
充電時間	約24時間		
定格	AC 100V / 5	50 - 60Hz / 1,3	3W
使用時間	10日間(1日2回、	各2分間使用した場	(合)
寸法	1	···· D 42×H2 ···· W 51×D1	
質量	本体:161g 充電器:118g		
付属品	ホワイトニングブラ	ゴイド、歯間ワイパー ラシ、歯間ブラシ、 ホルダー、トラベルク	

接続と充電のしかた

充電器の電源プラグをコンセントに差し込みます。 電圧についての詳細は、充電器の本体表示をご参照下さい。

- ▶ 充電中は緑のライトが点滅します。充電が完了すると、 ライトが消えてお知らせします。フル充電の状態で約 10日間ブラッシングをすることができます。(1日2回、 各2分間使用した場合)
- 注意: 充電を始めたとき、ライトがすぐに点滅しない場合 でも、10~15分後には点滅し始めますので充電 を続けてください。
- ▶ 充電池残量が低下すると、スイッチをOn/Offした時に 赤い充電マークが数秒点減してお知らせします。充電 池を完全に使い切ると、モーターが止まります。約40 分間の充電をすることで、約2分間ブラッシングをする ことができます。
- ▶ 充雷池残量は、スイッチを数秒On/Offするか、または 充電器にセットすることで確認することができます。

スマートガイド設定

スマートガイド

は初期起動時にデモンストレーション モードが設定されています。裏面の電池入れカバーを外 し(4ページ図A)《set》または《h/min》ボタンを押して 解除することができます。スマートガイドの画面に《12: 00》が点滅していると、時間設定ができる状態です。

時計の設定

▶ 《set》ボタンを《12h》が表示されるまで押し続けま す。《H/min》ボタンを短く押すと、「12時間 または 「24時間」の時間表示切り替えができます。

《set》ボタンを押して確定します。時間の数字が点滅し ます。正しい時間が表示されるまで《h/min》ボタンを 押して調整し、《set》ボタンを押して確定します。分単 位も同様に設定します。(4ページ図B)

時計機能を使用しない場合、《12:00》が点滅した状態 でおくと24時間後に点滅表示が消えます。

スマート	ガイドの表示・意味
マーク	意味
	「クリーン」 モード
+	「しっかりクリーン」 モード
	「やわらかクリ ー ン」モード
\bigotimes	「ホワイトニング」 モード
\approx	歯ぐきケアモード
	「押しつけ防止センサー」 圧力がかかりすぎていることをお知らせ します。ブラッシング時の力のかけ方を 弱くしてください。
	「次ココサイン」 次の部分が点滅したら、口腔内の次の部 分に移ってブラッシングしてください。
(1)	歯科医が推奨する2分間のブラッシング 時間が経過しました(しっかりクリーン モード時は3分間)
★☆☆☆	4分の1が終わるごとに★のマークが表示されます。
	スマートガイドの電池容量が少なくなっ

使いかた

効果的な磨きかた

▶ブラシを濡らして歯磨き粉をつけてからお使いください。 どんな種類の歯磨き粉もご使用になれます。水しぶきの飛 び散りを防ぐために、ブラシを口の中に入れてから本体の スイッチのをいれてください。ブラシを軽く歯に当てて、一 本一本ゆっくりと移動させます。ブラシを歯に2~3秒当て た後、次の歯に移ります。外側の歯からはじめて、内側に移 り、最後に歯のかみ合わせ部分を磨きます。(5ページ図 3)。口腔内を4分割した部分をそれぞれ均等に磨きます。

てください。

ています。スマートガイドの電池を交換し

▶電動歯ブラシを使用し始めてから数日間は、若干歯ぐ きから出血することがあります。通常、その場合の出血 は数日で止まりますが、出血が長く続く場合は使用を 中止して、歯科医の診断を受けてください。使い始め や歯ぐきがデリケートになっているなどの場合は、「や わらかクリーン」モードでの使用をお勧めします。

タイマー

- 《プロフェッショナルタイマー》または《2分間タイマー》またそれぞれ《カウントアップ》か《カウントダウン》のどちらかを選択することができます。
- ▶ 《2分間タイマー》歯科医が推奨するブラッシング時間 《2分間》が経過すると、4つのピープ音とスマート ガイドのスマイルマークがお知らせします。
- ▶ □腔内を4分割した部分を磨きやすいよう、プロフェッショナルタイマーが30秒ごとに短めのビープ音で次の1/4に移るタイミングをお知らせします(「しっかりクリーン」モードでは45秒ごと)(5ページ、図3)。ビープ音1回で最初の4分の1、2回で4分の2を、3回で4分の3の終了を、4回のビープ音で推奨の2分間のブラッシングの終了をお知らせします。
- ▶タイマーはブラッシングの経過時間を記憶します。ブラッシング中に電源を切った後30秒の間、経過時間を本体に記憶します。電源を切った状態が30秒以上続くと、初めの状態に戻ります。モードボタン むを押すことでリセットすることができます。
- 《カウントアップタイマー》は実際のブラッシングの時間を表示します。《カウントダウンタイマー》は残りのブラッシング時間を表示します

タイマーの個人設定

最初の設定ではプロフェッショナルタイマーとカウント アップタイマーとなっています。これらを変更するには、 以下のように行います。

- ■ブラッシングモード切替スイッチを長押し(3秒間)すると、スマートガイドに「:30」および「タイマー(timer)」と表示されます。
- ②ON/OFFスイッチを短く押すと、2分間タイマーに切り 替わるので、お好みのモードを表示させ、再びブラッシ ングモード切替スイッチを押し確定します。
- ③すると、画面はカウントアップタイマーが表示されます (「アップ(up)」と「タイマー(timer)」を表示)。 ON/OFFスイッチを押すとカウントダウンタイマーに 切り替わるので、ブラッシングモード切替スイッチを押 して確定します。

押しつけ防止センサー

歯に強く当てすぎると本体についたライト が光ってお知らせします(5ページ図3)その際、「クリーン」または「しっかりクリーン」モードでご使用の場合は、自動的に「やわらかクリーン」モードに変わります。定期的にいつもより少し強めにブラシを押しあて、押しつけ防止センサーが作動するかどうかをご確認ください。

ブラッシングモ**ー**ド

二一ズに合わせたブラッシングモードを選択できます。

《クリーン》 …………… 歯と歯ぐきをしっかりとブラッシング (毎日の歯磨きに)

《しっかりクリーン》…「クリーン」モードよりも長く、歯と歯ぐきをしっかりとブラッシング。 (口腔内を4つにわけた部位ごとの歯磨き時間を45秒ごとに延長、全体の歯磨き時間を3分間に延長)。

《やわらかクリーン》…やさしくブラッシングしたいとき (歯ぐきの状態が気になるとき)

《ホワイトニング》……ステイン(着色汚れ)を除去して自然な白い歯に(スペシャルケアまたは毎日の歯磨きに)。

《**体ぐきケア**》…… 歯ぐきにやさしい振動

通常は「クリーン」モードで始動します。他のモードに切り替えるには、続けてブラッシングモード切替スイッチを押してください(5ページ、図4)「クリーン」モードに戻すには、ブラッシングモード切替スイッチを押し続けてください。ブラッシングの途中でスイッチが切られても、ブラッシングモードは記憶されます。電源を切った状態が3秒以上続くか、、一旦停止中にブラッシングモード切替スイッチのが押されると、「クリーン」モードにリセットされます。

ブラシについて

ブラウンオーラルBはブラウンオーラルBデンタプライド スマートガイド5000でご使用になれる替ブラシをご用 意しております。

▶フロスアクション<歯間ワイパー付きブラシ>(EB25)

ソフトラバー製の黄色い歯間ワイパーが、やさしく歯と歯の奥まで入り込み、 こびりついたしつこい汚れまでしっか りきれいに磨き取ります。



▶ホワイトニングブラシ(EB18)

美白ラバーカップがあなたの気になる 黄ばみや黒ずみを、しっかり落として自 然な白い歯に磨きあげます。12歳以 下のお子様の歯磨きにはホワイトニン グブラシをご使用にならいでください。



注意: 歯列矯正器を装着されている場合には、フロスアクション、ホワイトニングブラシのご使用をお勧めしません。 歯科矯正専用ブラシのご使用をお勧めいたします。

▶歯間用ブラシ(IP17)

歯間や、歯と歯ぐきの境目にしっかり 入り込みます。ブラッシング後の追加 ケアや、ブリッジ、クラウン、インプラントの清掃に効果的です。ブラシを45 度の角度で歯と歯茎の境目にあて、歯 と歯の間で少し止め、ゆっくりと境にそって動かしてください。



上記のブラシは、青色の毛の部分が白くなってブラシの交換時期をお知らせします。正しい方法で一日2回2分間のブラッシングをしていると約3ヶ月で青色の毛先が白く変色します。ブラシの色が変わる前に毛先が開いた場合は、歯や歯ぐきに強くあてすぎている可能性があります。

歯ブラシの同期化

ご家庭で一台のスマートガイドとオーラルBデンタプライド5000本体を1本以上お使いになる場合、それぞれをスマートガイドに割り当てる必要があります。

1つのスマートガイドと同期できる本体は2本までです。同期化するにはスマートガイドの電池ボックス内部にある《h/min》ボタンを3秒以上押し続けます。スマートガイドの表示画面に《L---》と表示されます。歯ブラシ本体の電源を入れると、同期化プロセスが始動します。《L-1-》が表示されると完了です。歯ブラシ本体の電源を切ります。同じスマートガイドに2本目の歯ブラシ本体を割り当てる場合には、2本目の歯ブラシの本体の電源を入れ、《L-2-》が表示されたら完了です。2本目が同期化されると、《Full》と表示されます。《h/min》または《set》を押すと同期化モードを終了することができます。なお、3 〇秒後には自動的に終了します。

ご使用後のお手入れのしかた

ブラッシング後、電源をつけたままブラシの先を下にむけ、流水でよくすずぎます。スイッチを切り、ブラシを取り外し、流水ですすいだ後、ブラシと本体の水気を拭き取ってから装着しなおしてください。お手入れの際は、充電器から取り外してください。充電器は湿らせた布でのお手入れのみとしてください。食器洗浄機には絶対に入れないでください。ブラシケース、ケースカバーは食器洗浄機に入れて洗うことができます。(5ページ図5)


壁掛けホルダー

スマートガイドを壁や鏡などに取り付けたい場合には、両面テープ(k)を使って取り付けてください。最初に取り付ける場所が汚れていたり水気がないか確認します。壁掛けホルダー(j)を「Oral-B」のマークが正しく読める位置に取り付け、均等に強く押し付けます。24時間たってから、壁掛けホルダーにスマートガイドをスライドさせて取り付けます(4ページ図C)。両面テープは、汚れ防止の壁面にはご使用になれません。

廃棄時の充電式電池の取り外し

本体電池

で使用済みの製品は、スイッチオン状態にて動作しなくなるまで完全に電池を使いきった後、以下図の手順で本体を分解して充電式電池を取り外し、地域の規則に応じて処理してください。

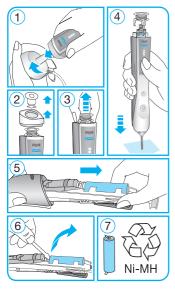

- 1)ハンドルを充電器にはめ、ハンドルを反時計回りに回します(約90度)
- 2本体の底面を Fにして、底部を取り外します。
- 3コイル状の部品をカチッと音がするまで引いてください。
- 4 固い板の上でシャフトを下にして、本体を押しつけてください。モーターと電池が組み込まれた内部部品が、本体底部から出てきます。(傷をつける可能性がありますので、傷つきやすい家具などの上では行わないでください)。
- **⑤**けがをしないように充分に注意して、本体から内部部 品を引き抜きます。
- 6 お手持ちのドライバー等で電池を取り出してください。取り出した廃棄電池はプラス・マイナス端子をショートさせないよう充分ご注意ください。
- 7取り出した使用済み電池は、リサイクルボックスを設置 している最寄りの協力店、または回収窓口へお持ちく ださい。
- 注意:製品の廃棄以外の目的では絶対に本体底部を分解 しないでください。修復は不可能になり、保証対象 外になります。

スマートガイドの電池について

完全に使い切った電池は直ちに廃棄して、2本の電池は 同時に交換してください。アルカリ電池は亜鉛電池また は充電式電池と一緒に使用しないでください。

本書の内容は予告なしに変更されることがあります。

製品を廃棄するときのお願い

この製品にはニッケル水素電池を使用しております。ニッケル水素電池はリサイクル可能な貴重な資源です。ご使用済みの製品を廃棄する際は、必ず電源プラグをコンセントから抜き、スイッチオン状態にて製品が動作しなくなるまで完全に放電させた後、製品の取扱説明書に従って充電式電池をはずしてください。取り出した廃棄電池はプラス・マイナス端子をショートさせないよう十分注意し、小形二次電池リサイクル協力店にお持ちください。

最寄りのリサイクル協力店についての

詳細は、一般社団法人JBRCのホームページをご覧下さい。

http://www.jbrc.com

保証とアフターサービス

1. 保証書について

- ●保証書はこの取扱説明書の巻末についておりますので、必ず「販売店名」と「お買い上げ日」が記入されていることをお確かめになり、保証内容をよくお読みの後、大切に保管してください。
- ●メーカー保証期間はお買い上げ日から1年間です。
- ●消耗品、付属品は保証対象外です(保証対象部分は保証書に記載されています)。

2. 修理のご依頼について

- ●ご使用中に異常、または故障が生じた場合は直ち に使用を中止し、ブラウンリペアセンターまたは お買い上げの販売店に点検修理をご依頼くださ い。
- ●保証期間中は、「販売店名」と「お買い上げ日」が 記入されている保証書を提示の上、お申し付けく ださい。
- ●保証期間が過ぎているときは、修理によって機能が維持できる場合は、お客様の希望により有料にて修理させていただきます。

3. 補修用性能部品の保有期間について

●本製品の補修用性能部品は製造終了後、6年間保有しております。補修用性能部品とは、その製品の機能を維持するために必要な部品です。

4. 充電池について

●取扱説明書に従った充電をしても使用時間が著しく低下する場合は、電池の寿命である可能性がございますのでお買い上げの販売店またはブラウンリペアセンターにご相談ください。寿命による充電池交換は有料修理になります。廃棄時以外は電池を取りはずさないでください。

5. アフターサービスについて

●ご不明な点やご相談は、お買い上げの販売店また はブラウンお客様相談室へお問い合わせくださ い。

ブラウン製品サービス窓口について

▶ 修理のお問い合わせご相談は

ブラウンリペアセンター 27049-281-2033

受付時間 9:30~12:30/ 13:30~17:30 (祝日を除く月~金)

〒350-0269 埼玉県坂戸市にっさい花みず木5-7-3

▶ 製品全般についてのお問い合わせ·ご相談は • • • •

ブラウンお客様相談室 0120-136343

受付時間 9:00~17:30 (祝日を除く月~金)

※ご注意:電話番号、受付時間等が変更になることがあります。

長年ご使用の電気製品の点検を!

愛情点検



こんな症状はありませんか?

- スイッチを入れても、時々運転しないことがある。
- 電源コードを折り曲げると通電したり、しなかったりする。
- 電源コードやプラグが異常に熱い。
- 運転中に異常な音、振動がする。
- ◆ 本体が変形していたり、コゲくさい臭いがする。
- 本体及び刃の変形・破損。
- ●充電時間が長くなった。 (あるいは、充電してもすぐ電気がなくなるように感じる)
- その他の異常·故障がある。

お願い

このような症状のときは、使用を中止し、故障や事故防止のため、スイッチを切り、コンセントから差込みブラグをはずして、必ずブラウンリペアセンターまたはお買い上げいただいた販売店にご相談ください。そのままの使用は、故障や火災等の原因となるおそれがあります。

家電製品全般の安全使用について

(財)家電製品協会ホームページへ http://www.aeha.or.jp

◆商品の仕様·外観·価格は予告なしに変更することがあります。


プライバシーについて

お客様から収集した個人情報はお客様からのお問い合わせや ご依頼への対応およびそれらに付随する業務の実施の為に使われます。お客様の個人情報は、その秘密が保持されるよう P&Gグループのデータベースに保管され、ご本人の同意を得ずに外部機関に対してそれらの情報の交換・売買・共有を行うことはありません。ただし、前述の業務を代行者に委託するために、弊社は業務代行者へ業務遂行に必要最低限の個人情報を開示する場合があります。業務代行者は、開示された個人情報を、弊社から委託した内容を超えて使用することを禁じられており、また情報を適切に取り扱います。なお、弊社プライバシーポリシー詳細はごちらでご覧いただけます。


http://www.pg.com/privip (PC専用)


無料修理規定


- 1. 取扱説明書、本体添付ラベル等の注意書に従った使用状態で、保証期間内に故障した場合には、無料にて修理をさせていただきます。
- 2. 保証期間内に無料修理をお受けになる場合には、製品と保証書をご持参、ご提示のうえ、お買い上げ販売店またはブラウンリペアセンターにお申し付けください。なお、有料・無料に関わらず、修理のために対象製品を直接当社にお送りいただく場合、その送料等はお客様負担となります。
- ご転居の場合は、事前にお近くの販売店、またはブラウンリペアセンターにご相談ください。
- 4. ご贈答などで、本保証書に記入してあるお買い上げ販売店に修理がご依頼できない場合には、ブラウンリペアセンターにご相談ください。
- 5. 保証期間内でも次の場合は有料修理になります。
 - ●使用上の誤り及び不当な修理や改造による故障な らびに損傷。
 - ●お買い上げ後の移動、輸送、落下等による故障なら びに損傷。
 - ●火災、地震、水害、落雷、その他の天災地変、異常電圧、指定外の使用電源(電圧や周波数)等による故障ならびに損傷。
 - ●一般家庭以外(業務用等での長時間利用等)に使用された場合の故障ならびに損傷。
 - ●保証書の提示がない場合。
 - ●保証書にお買い上げの年月日、お客様名、販売店名の記入または販売店から発行される同等の証明書のない場合、あるいは字句を書き換えられた場合。
 - ●消耗品の磨耗や損傷。
 - ●当社が認可していない店舗等で修理を行った場合。
- 6. 保証書は日本国内においてのみ有効です。
- 7. 保証書は再発行いたしませんので紛失しないよう大切に保管してください。

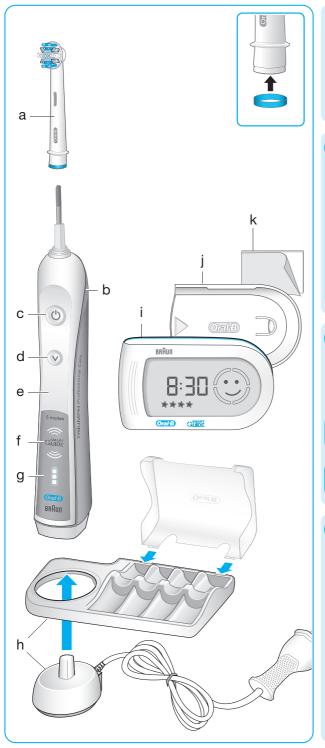



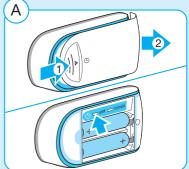

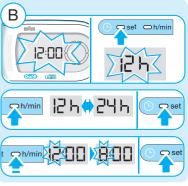

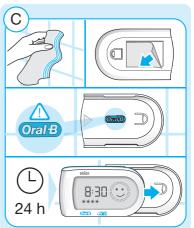

English

Welcome to Oral-B!

Before operating this toothbrush, please read these instructions and save this manual for future reference.

IMPORTANT

- Periodically check the cord for damage. If the cord is damaged, take the charging unit to an Oral-B Braun Service Centre. A damaged or non-functioning unit must no longer be used.
- This product is not intended for use by children under age three.
- This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, unless they are supervised by a person responsible for their safety. In general, we recommend that you keep the appliance out of reach of children.
- Children should be supervised to ensure that they do not play with the appliance.
- If the product is dropped, the brush head should be replaced before the next use even if no damage is visible.
- Do not place or store the charger where it can fall or be pulled into a tub or sink.
- Do not place the charger in water or other liquid.
- Do not reach for a charger that has fallen into water. Unplug immediately.
- Do not modify or repair the product. This may cause fire, electric shock or injury. Consult your dealer for repairs or contact an Oral-B Service Centre. Do not disassemble the product except when disposing of the battery.
- When taking out the battery for disposal, use caution not to short the positive (+) and negative (-) terminals.
- Do not insert any object into any opening of the appliance/charger.
- Do not touch the power plug with wet hands. This can cause an electric shock.
- When unplugging, always hold the power plug instead of the cord.
- Use this product only for its intended use as described in this manual. Do not use attachments which are not recommended by the manufacturer.
- If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.
- This product is made for indoor use only.

Important Information

Your Oral-B DENTA-PRIDE 5000 uses an interactive wireless display. To avoid electromagnetic interference and/or compatibility conflicts, deactivate the radio transmission before using it in restricted surroundings, such as aircrafts or

specially marked areas in hospitals. Deactivate radio transmission by simultaneously pressing the on/off and mode button for 3 seconds until the radio transmission display (f) goes off. Follow the same procedure to reactivate transmission again.

 Persons with pacemakers should always keep the toothbrush more than six inches (15 centimeters) from the pacemaker while turned on. Anytime you suspect interference is taking place, deactivate the radio transmission of your toothbrush.

Description

- a Brush head
- b Pressure sensor light
- c On/off button
- d Brushing mode button
- e Handle
- f Radio transmission display
- g Charge indicator
- h Charging unit (basic charger and brush head compartment with protective cover)
- i SmartGuide
- Wall mount
- k Adhesive tape

Connecting and charging

- Plug the charger into an electrical outlet. For electric specifications, see printing on the charger.
- The flashing green lights indicate that the toothbrush is charging; once it is fully charged, the lights turn off. A full charge enables approx. 10 days of regular brushing (twice a day, 2 minutes).
 Note: If the green lights do not flash immediately, continue charging. They will appear in 10–15 minutes.
- If the rechargeable battery is low the red low charge indicator light is flashing for some seconds when turning your toothbrush on/off. If the rechargeable battery is empty the motor will stop; it will need a 40-minute charge before you can use it for a 2-minute brushing.
- You can check the charging status for some seconds by turning your toothbrush on/off or placing it on the charging unit.

SmartGuide adjustments

The SmartGuide (i) comes with a demonstration mode activated. Deactivate this mode by removing the battery compartment cover in the back (picture A,

page 4) and push the «set» or «h/min» button. A flashing «12:00» indicates that you can now adjust the clock time.

Clock time

Press and hold the «set» button until «12h» is displayed. By briefly pressing the «h/min» button, you can toggle between «12h» or «24h» daytime format. Push «set» to confirm your choice. Then the hour digit starts flashing. Press the «h/min» button until the right hour appears and confirm with «set». Proceed same way to set both minute digits (picture B, page 4). If you prefer not using the clock feature, the flashing «12:00» will disappear automatically after 24h.

SmartGuide Icons

Displayed Icon	Meaning
	«Daily Clean» mode
+	«Deep Clean» mode
A Company	«Sensitive» mode
\bigotimes	«Polish/Whitening» mode
\approx	«Gum Care» mode



Too much pressure is applied. Reduce the brushing force.



«Quadrant circle» Move to the next quadrant of your mouth when the relevant segment flashes.



You reached the dentist recommended 2-minute brushing time (3-minute brushing time within the Deep Clean mode).



You will receive a star with each completed quadrant.



Smart Guide Batteries are low. Change batteries of the SmartGuide.

Using your toothbrush

Brushing technique

Wet brush head and apply toothpaste; you can use any kind of toothpaste. To avoid splashing, guide the brush head to your teeth before switching the appliance on (c). Guide the brush head slowly from tooth to tooth, spending a few seconds on each tooth surface. Start brushing the outsides, and then the insides and finally the chewing surfaces (picture 3, page 5). Brush all four quadrants of your mouth equally.

In the first days of using any electric toothbrush, your gums may bleed slightly. In general, bleeding should stop after a few days. Should it persist after 2 weeks, please consult your dentist or dental hygienist. If you have sensitive teeth and gums, Oral-B recommends using the «Sensitive» mode.

Timer

You can choose between «Professional» or «2-Minute» timer and «Count up» or «Count down» timer.

The «2-Minute» timer signals with four beeps and a Smiley on the SmartGuide that the dentist recommended 2-minute brushing time has been reached.

In addition the «Professional» timer signals with short beep sounds at 30-seconds intervals to move to the next quadrant of your mouth (45 seconds intervals within «Deep Clean» mode) (picture 3, page 5). A single beep indicates completion of the first quadrant, two beeps the second one, three beeps the third one and four beeps sound when you reach the recommended 2-minute brushing time.

The timer memorizes the elapsed brushing time, even when the handle is briefly switched off during brushing. The timer resets if pausing longer than 30 seconds or briefly pressing the mode button (d) during pause.

The «Count Up» timer displays your actual brushing time. The «Count down» timer indicates the remaining brushing time.

Personalizing the timer

Your toothbrush comes with the «Professional» and «Count up» timer activated. To change this, press and hold the brushing mode button for 3 seconds until the SmartGuide shows «:30» and «timer». Briefly press the on/off button to switch to the «2-Minute» timer. Push the mode button to confirm. The SmartGuide now shows «up» and «timer». Press the on/off button to switch to the «Count down» timer and confirm with the mode button. Leave the setup menu by pressing the mode button.

Pressure sensor

If you put excessive pressure on your teeth, the red pressure sensor light (b) will light up (picture 3, page 5). Additionally, when brushing in Daily Clean or Deep Clean mode, the brushing mode will change to the «Sensitive» mode. Periodically check the operation of the pressure sensor by pressing moderately on the brush head during use.

Brushing modes

Your toothbrush offers different brushing modes:

«Daily Clean»

- Standard mode for daily mouth cleaning
- «Deep Clean»
- Mouth cleaning with extended brushing time of 45 seconds per quadrant (3 minute total brushing time

«Sensitive»

- Gentle, yet thorough cleaning for sensitive areas
- «Polish/Whitening» Polishing for occasional or everyday use
- «Gum Care»
- Gentle vibration for gum

Your toothbrush automatically starts in the «Daily Clean» mode. To switch to the other modes, successively press the mode button (picture 4, page 5). To return from any mode back to the «Daily Clean» mode, press and hold the mode button. The brushing mode is memorized even when the handle is briefly switched off during brushing. When pausing longer than 30 seconds or briefly pressing the mode button (d) during pause the brushing mode resets to the «Daily Clean» mode.

Brush heads

Oral-B offers you a variety of different brush heads that fit your Oral-B DENTA-PRIDE 5000 toothbrush.

Oral-B FlossAction



features micropulse bristles that allow for an outstanding plaque removal in the interdental areas.

Oral-B ProWhite



features a special polishing cup to naturally whiten your teeth. Please note that children under 12 years old should not use the Oral-B ProWhite brush head.

Oral-B Interdental



cleans between teeth, around bridges, crowns and implants. Position the brush head at a 45 degree angle to the gumline. Slowly guide it along the gumline, pausing between each tooth. All brush heads feature light blue INDICATOR bristles to help you monitor brush head replacement need. With thorough brushing, twice a day for two minutes, the blue color will fade halfway down approximately in a 3-month period. If the bristles splay before the colour recedes, you may exert too much pressure on teeth and gums.

We do not recommend using the Oral-B FlossAction or Oral-B ProWhite brush head with braces. You may use the Oral-B Ortho brush head, specifically designed to clean around braces and wires.

Synchronizing your toothbrush

To avoid interference of display messages when using more than one Oral-B DENTA-PRIDE 5000 toothbrush with SmartGuide in the same household. you need to assign the handles to their respective SmartGuide.

You can synchronize a maximum of 2 handles with one SmartGuide. To do so, push the «h/min» button in the battery compartment for at least 3 seconds. The SmartGuide shows «L---». Turn on your handle to start the synchronization process. It is finished when «L-1-» is displayed. Turn off the handle. To assign a second handle to the same SmartGuide turn on the other handle until «L-2-» is displayed. After having synchronized the second handle, «Full» will be displayed. Exit the syncronization mode by pressing the «h/min» or «set» button, otherwise it will end automatically after 30 seconds.

Cleaning recommendations

After brushing, rinse your brush head under running water with the handle switched on. Switch off and remove the brush head. Clean handle and brush head separately: wipe them dry before reassembling. Disassemble the charging unit before cleaning. Brush head compartment and protective cover are dishwasher-safe. Both basic charger and SmartGuide should be cleaned with a damp cloth only (picture 5, page 5).

Wall mount


Use the adhesive tape (k) if you prefer to mount the SmartGuide on a wall, mirror or other surface. Make sure the chosen surface is clean and dry. Position the wall mount (j) with the Oral-B logo readable and press it evenly and firmly to the wall. Wait 24h before sliding the SmartGuide into the fixed wall mount

(picture C, page 4). The adhesive tape will not work on dirt-repellent surfaces.

Removing batteries

Handle battery

At the end of the product's useful life, open the handle as shown, remove the rechargeable battery and dispose of it according to local environmental regulations.

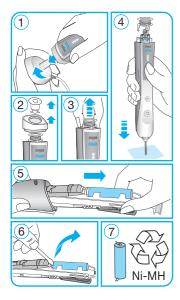

Caution! Opening the handle will destroy the appliance and invalidate the warranty.

SmartGuide Batteries

Remove fully discharged batteries immediately. Replace all batteries at the same time. Do not mix alkaline batteries with zinc carbon or rechargeable batteries.

Subject to change without notice.

This appliance complies with the requirements covered by the European Directive 1999/5/EC.
Receiver Class 3, Duty Cycle Class 3.
To find the complete EC declaration of conformity, please visit www.oralb.com/ce.

Environmental Notice

This product contains rechargeable batteries. In the interest of protecting the environment, please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at an Oral-B Braun Service Center or at approved recycling or disposing locations in accordance with local regulations.

Guarantee

We grant 1 year limited guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose. This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear or use, especially regarding the brush heads, as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Oral-B Service Centre.

修理メモ			

この保証書は、本書に明示した期間、条件のもとにおいて 無料修理をお約束するものです。従ってこの保証書に よって、保証を発行している者(保証責任者)、およびそれ 以外の事業者に対するお客様の法律上の権利を制限す るものではありませんので、保証期間経過後の修理につ いて不明の場合は、お買い上げの販売店またはブラウン リペアセンターにお問い合わせください。

ブラウン オーラルB デンタプライド 保証書

持込修理

本書は、本書記載内容(裏面記載)で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は本書をご提示のうえ、お買い上げの販売店に修理をご依頼ください。お客様にご記入いただいた保証書は、保証期間内のサービス活動及びその後の安全点検活動のために記載内容を利用させていただく場合がございますので、ご了承ください。

品名	電気歯ブラシ		
型番	D34.535.5X		
	対 象 部 分	期間 (お買い上げの日より)	
保証内容	本体/充電器 (但し替ブラシは除く)	1年	
お買い上げ日	年 月	B	
お客様ご芳名			
ご 住 所			
 販売店・住所			

(販売店名及びお買い上げ日の記入なきものは無効です)

プロクター・アンド・ギャンブル・ジャパン株式会社

〒658-0032 神戸市東灘区向洋町中1-17